



Rocky Mountain Snow Guards Inc


ROCKY MOUNTAIN SNOW GUARDS
4231 S. NATCHES COURT, UNIT C
ENGLEWOOD, CO 80110
PHONE: (877) 414-7606
FAX: (720) 387-8361
www.rockymountainsnowguards.com

INSTALLATION INSTRUCTIONS

SNOW GUARD PLACEMENT FOR SHINGLE STYLE ROOFS (Asphalt Shingle, Tile, Slate, Synthetics, Metal Shingle)


Less than a 6/12 Pitch

For roofs less than 6/12 pitch, the distance between the butt end and the pad face must be a minimum of $3x$ the thickness of the roofing material.

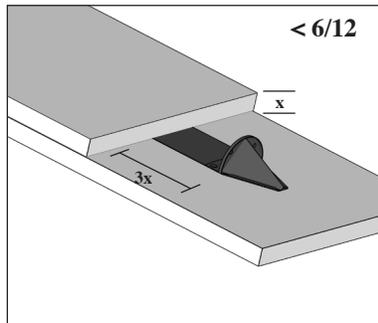


Greater than or equal to 6/12 Pitch


For roofs greater than 6/12 pitch, the distance between the butt end and the pad face must be a minimum of $6x$ the thickness of the roofing material.

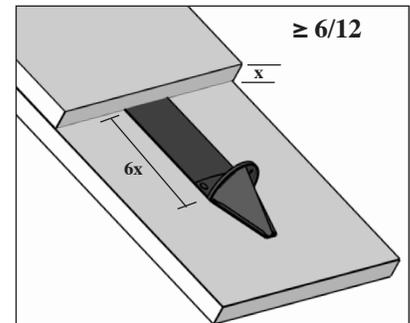


EXAMPLE PATTERNS: (Specified pattern and dimensions are dependent on individual roof characteristics.)

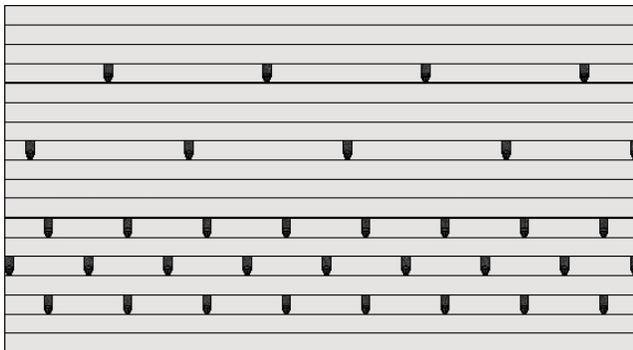


TRADITIONAL SPREAD PATTERN

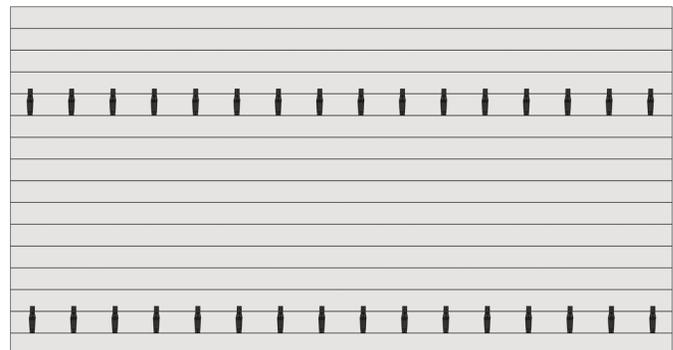

MULTIPLE SOLDIER ROW

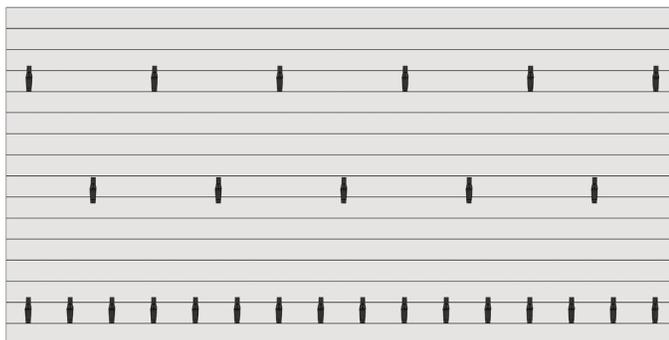

SOLDIER ROW WITH SPREAD PATTERN

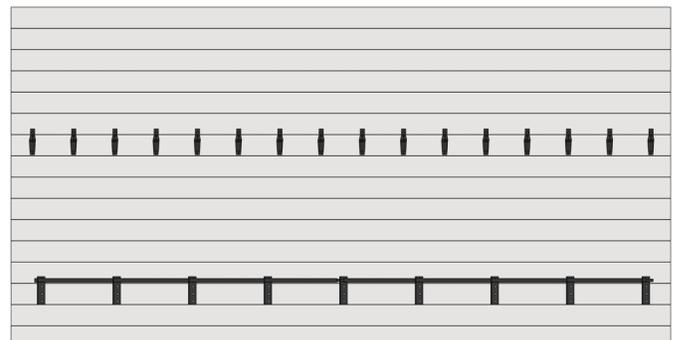

SNOW FENCE WITH SOLDIER ROW



Rocky Mountain Snow Guards Inc

ROCKY MOUNTAIN SNOW GUARDS
4231 S. NATCHES COURT, UNIT C
ENGLEWOOD, CO 80110
PHONE: (877) 414-7606
FAX: (720) 387-8361
www.rockymountainsnowguards.com

INSTALLATION INSTRUCTIONS CONTINUED

ST Tile Barb, ST16R, Yeti Tile Barb, Yeti 16R, RGTile Barb, RGSlate Snow Guards

NEW ROOF

1. Follow recommended layout pattern for specific roof and snow situation following the Rocky Mountain Snow Guard Layout Guide.
2. Mark location of each snow guard.
3. Apply a nickel size dollop of Sealant 6" from the top of shingle at the mark. Sealant keeps the snow guard from moving side to side.
4. Place the snow guard such that the barb is pressed against the top of the shingle and snow guard is seated in sealant.
5. Continue shingling roof.



EXISTING ROOF

1. Follow recommended layout pattern for specific roof and snow situation following the Rocky Mountain Snow Guard Layout Guide.
2. Mark location of each snow guard.
3. Apply a nickel size dollop of sealant 6" from the top of tile at the mark. Sealant keeps the snow guard from moving side to side.
4. Lift tile above just enough to slide new snow guard under.
5. Slide snow guard up so barb passes top of tile.
6. Pull down on the snow guard to ensure barb is engaged and snow guard is seated in sealant.







Rocky Mountain Snow Guards Inc

ROCKY MOUNTAIN SNOW GUARDS
4231 S. NATCHES COURT, UNIT C
ENGLEWOOD, CO 80110
PHONE: (877) 414-7606
FAX: (720) 387-8361
www.rockymountainsnowguards.com

ST Tile Barb, ST16R, Yeti Tile Barb, Yeti 16R, RGTile Barb, RGSlate Snow Guards

NEW ROOF

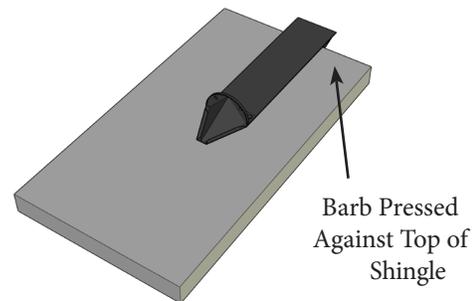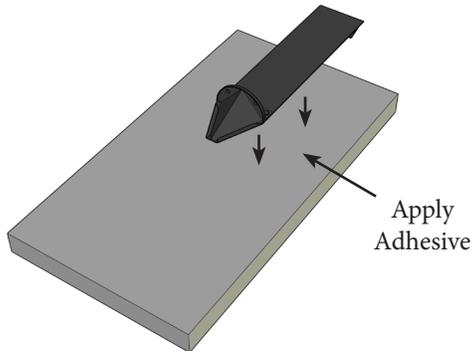

EXISTING ROOF

