

# **SnowCap I - Copper 1-Pipe Snow Fence Specification Sheet**

# PART 1 GENERAL

### 1.1 SUMMARY

- A. Work Includes
  - 1. Snowcap I Copper non-penetrating standing seam snow fence that clamps to standing seam rib.
  - 2. Provide necessary components: Clamps, Round Bars, End Caps.
  - 3. Provide adequate attachment of standing seam panel to roof structure.

# **1.2 RELATED SECTIONS**

- 1. Section 07610 Standing Seam Metal Roofing
- 2. Section 07410 Preformed Metal Roofing
- 3. Section 07600 Flashing and Sheet Metal

# 1.3 SYSTEM

A. Components

1. Snowcap I Copper Snow Fence Bracket consisting of two piece clamp and two 3/8" carriage bolts nuts.

- 2. Copper Tubing with powder coated steel reinforcement with union.
- 3. Copper End Cap

Design - To be recommended by Manufacturer or Structural Engineer.

- 1.4 SUBMITTAL Submit Manufacturers Specifications, recommended layout, product drawings and installation instructions.
- 1.5 QUALITY ASSURANCE Installer to be experienced in roofing and snow retention for a minimum of not less than 5 years.
- 1.6 DELIVERY/STORAGE Inspect material upon delivery and inform distributer of any damaged or missing items. Protect materials from damage until installation.

### PART 2 PRODUCTS

#### 2.1 MANUFACTURER

- A. Rocky Mountain Snow Guards, Inc. 4231 S. Natches Court, Unit C, Englewood, CO 80110 (877) 414-7606 / www.rockymountainsnowguards.com
- A. Clamp 1/4" Full Hard Copper Plate
- B. Bolts and Nuts 3/8"x 1-3/4" silicone brass carriage bolt and 3/8" nyloc brass nut.
- C. .88" OD Copper Tubing with powder coated steel insert and press fit union.
- D. .88" OD Copper End Cap
- E. Ice Flag 3"x variable length, 1/4" Full Hard Copper Plate
- 2.3 FINISH Mill Finish

### PART 3 EXECUTION

3.1 EXAMINATION - Inspect roof structure and panel attachment to insure it will withstand ice and snow loads. Correct all problems before installation of snow fence.

3.2 INSTALLATION - Install according to architects drawing and manufacturer's instructions.