

ROCKY MOUNTAIN SNOW GUARDS 4231 S NATCHES CT, UNIT C ENGLEWOOD, CO 80110 PHONE: (877) 414-7606 FAX: (720) 387-8361

www.rockymountainsnowguards.com

# **BLIZZARD Heavy Duty II SNOW FENCE SYSTEM**

#### **AVAILABLE MATERIALS:**

- S-5! Aluminum Standard Clamps with Stainless Steel Hardware
- Aluminum Upright
- Aluminum Tubing, End Collars and End Caps

#### **OPTIONAL COMPONENTS:**

- Aluminum Ice Flags
- Aluminum Ice Screen

All Aluminum and Stainless parts are available powder coated or mill finish.

## **INFORMATION:**

- Blizzard Heavy Duty II brackets feature S-5! Clamps for all types of standing seam profiles
- Brackets and clamps are pre-assembled for quick onsite attachment.

## Excellent choice for:

- New and Existing Standing Seam Roofs





#### **EXAMPLES:**








ROCKY MOUNTAIN SNOW GUARDS 4231 S NATCHES COURT, UNIT C ENGLEWOOD, CO 80110 PHONE: (877) 414-7606


FAX: (720) 387-8361


www.rockymountainsnowguards.com


#### **BLIZZARD HEAVY DUTY II SNOW FENCE SYSTEM**


SELECT DESIRED S-5!® CLAMP:



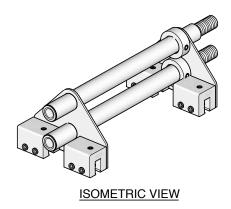

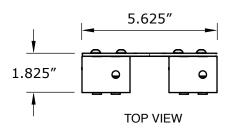

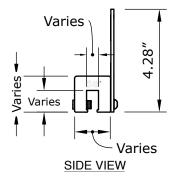

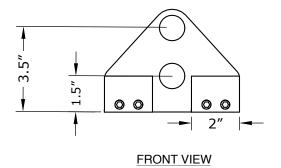

#### MANUFACTURER NOTES:

- 1. CONTACT MANUFACTURER FOR SPECIFIED LAYOUT PATTERN.
- 2. FOR CUSTOM MATERIALS CONTACT MANUFACTURER.
- 3. OTHER SIZES ARE AVAILABLE ON A CUSTOM BASIS.

## NOTES:

- 1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
- 2. DO NOT SCALE DRAWING.



The strength of the S-5-S clamp is in its simple design. The patented setscrews will slightly dimple the metal seam material but not pierce it—leaving roof warranties intact.


The **S-5-S** and **S-5-S Mini** clamps are each furnished with the hardware shown to the right. Each box also includes a bit tip for tightening setscrews using an electric screw gun. A structural aluminum attachment clamp, the S-5-S is compatible with most common metal roofing materials excluding copper. All included hardware is stainless steel. Please visit **www.S-5.com** for more information including CAD details, metallurgical compatibilities and specifications.

The S-5-S clamp has been tested for load-to-failure results on most major brands and profiles of standing seam roofing. The independent lab test data found at www.S-5.com can be used for load-critical designs and applications. S-5!® holding strength is unmatched in the industry. Profiles that are shaped as illustrated below will work with the S-5-S and S-5-S Mini. In order for the S-5-S or S-5-S Mini to fit these types of seams, the finished seam must:

- Be at least 1.00" high.
- Have a height distance less than or equal to 0.25" between the male portion of the panel and female portion of the panel.


# S-5-S Clamp


M8-1.25 X 16.00 mm Hex Flange Bolt

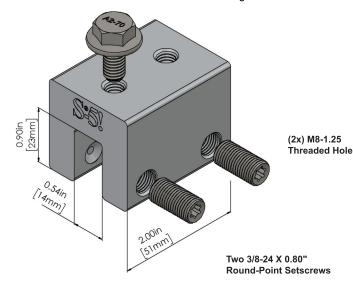


# S-5-S Mini Clamp

# **Example Profiles**

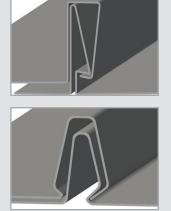

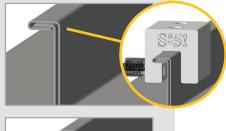



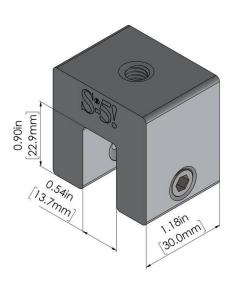

Please note: All measurements are rounded to the second decimal place.

#### S-5!® Warning! Please use this product responsibly!

Products are protected by multiple U.S. and foreign patents. Visit the website at www.S-5.com for complete information on patents and trademarks. For maximum holding strength, setscrews should be tensioned and re-tensioned as the seam material compresses. Clamp setscrew tension should be verified using a calibrated torque wrench between 160 and 180 inch pounds when used on 22ga steel, and between 130 and 150 inch pounds for all other metals and thinner gauges of steel. Consult the S-5! website at www.S-5.com for published data regarding holding strength.

Distributed by

Copyright 2021 Metal Roof Innovations, Ltd. S-5! products are patent protected. S-5! aggressively protects its patents, trademarks and copyrights. Version 081721.




ROCKY MOUNTAIN SNOW GUARDS 4231 S NATCHES COURT, UNIT C ENGLEWOOD, CO 80110 PHONE: (877) 414-7606

FAX: (720) 387-8361

www.rockymountainsnowguards.com

# **ALUMINUM SNOW FENCE COMPONENTS**

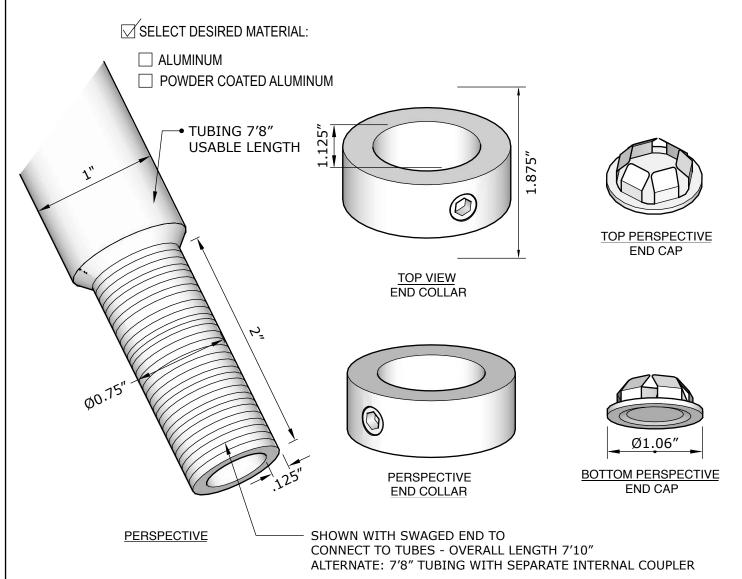

## MANUFACTURER NOTES:

- 1. CONTACT MANUFACTURER FOR SPECIFIED LAYOUT PATTERN.
- 2. FOR CUSTOM MATERIALS CONTACT MANUFACTURER.
- 3. OTHER SIZES ARE AVAILABLE ON A CUSTOM BASIS.

#### NOTES:

- 1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
- 2. DO NOT SCALE DRAWING.



ROCKY MOUNTAIN SNOW GUARDS 4231 S NATCHES COURT, UNIT C ENGLEWOOD, CO 80110 PHONE: (877) 414-7606


FAX: (720) 387-8361

www.rockymountainsnowguards.com


#### ICE FLAG - SNOW FENCE SYSTEM ACCESSORY

# SELECT DESIRED MATERIAL:

- COPPER 16 OZ
- PAINTED ALUMINUM 0.032"

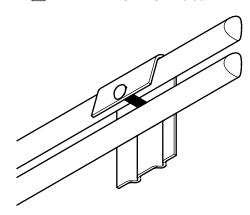


ISOMETRIC VIEW

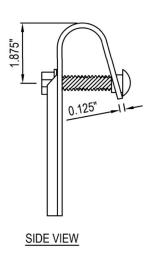

3.5"

**TOP VIEW** 

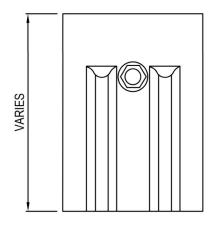

#### FRONT VIEW

#### MANUFACTURER NOTES:


- 1. CONTACT MANUFACTURER FOR SPECIFIED LAYOUT PATTERN.
- 2. FOR CUSTOM MATERIALS CONTACT MANUFACTURER.
- 3. OTHER SIZES ARE AVAILABLE ON A CUSTOM BASIS. NOTES:
- 1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
- 2. DO NOT SCALE DRAWING.




ROCKY MOUNTAIN SNOW GUARDS 4231 S NATCHES COURT, UNIT C ENGLEWOOD, CO 80110 PHONE: (877) 414-7606 FAX: (720) 387-8361

www.rockymountainsnowguards.com

# **ICE SCREEN - SNOW FENCE SYSTEM ACCESSORY**

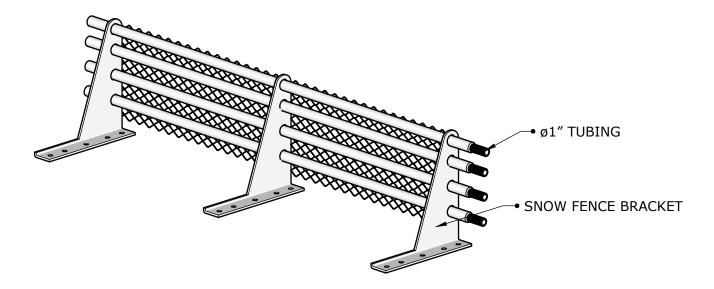

# ISOMETRIC VIEW

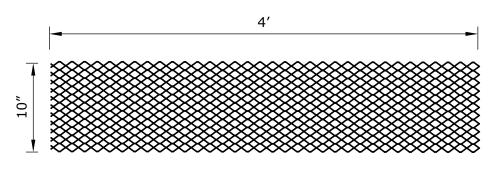

### **FRONT VIEW**

#### MANUFACTURER NOTES:

- 1. CONTACT MANUFACTURER FOR SPECIFIED LAYOUT PATTERN.
- 2. FOR CUSTOM MATERIALS CONTACT MANUFACTURER.
- 3. OTHER SIZES ARE AVAILABLE ON A CUSTOM BASIS.
- 4. MANUFACTURED OF EXPANDED T6061 ALUMINUM.

#### NOTES:

- 1. INSTALLATION TO BE COMPLETED IN ACCORDANCE WITH MANUFACTURER'S SPECIFICATIONS.
- 2. DO NOT SCALE DRAWING.



ROCKY MOUNTAIN SNOW GUARDS 4231 S. NATCHES COURT, UNIT C ENGLEWOOD, CO 80110 PHONE: (877) 414-7606

FAX: (720) 387-8361 www.rockymountainsnowguards.com

# Blizzard II, Blizzard Heavy Duty II and III Clamp-to-Seam Snow Fence Installation Instructions

Each Blizzard II is comprised of (2) S-5! Mini Clamps pre-attached to a 2-pipe aluminum upright. Blizzard Heavy Duty II and III are comprised of 2 S-5! Standard Clamps attached to aluminum upright.

- 1. Screw stainless steel setscrew(s) into each clamp.
  - ~2 Set Screws on each Blizzard II Bracket
  - ~4 Set Screws on each Blizzard Heavy Duty II and II Bracket



2. Using a laser level or chalk line, mark locations for brackets 12" from eave edge.

1st course only, more snow fence rows may be necessary. Consult Rocky Mountain Snow Guards Snow Retention Plan for location of additional rows.



3. Tighten each set screw. Torque wrenches are a must to achieve the torque.

Torque wrenches are a must to achieve the torque recommended for your specific panel. Recommended torque can be found at www.s-5.com.





# Blizzard II, Blizzard Heavy Duty II and III Clamp-to-Seam Snow Fence Installation Instructions Con't)

4. Insert 1" O/D Aluminum Tubing through brackets.



5. Slide Swaged Tube end into unfinished end of adjacent tubes to complete run.





6. Slide End Collars onto tubing and tighten, being careful to locate the collars on the INSIDE of the last bracket in a run.

Collars must be installed to the inside of the last bracket to hold tubing together at joints.



7. Insert End Caps and attach Ice Flags (if needed).





The right way<sup>TM</sup> to attach almost anything to metal roofs!

# **Installation Instructions**

**S-5!® Warning!** Please use these products responsibly! Visit our website or contact your S-5! distributor for available load test results. The user and/or installer of these parts is responsible for all necessary engineering and design to ensure the S-5! clamps have been properly spaced and configured. **Notice to S-5! users:** Due to the many variables involved with specific panel products, climates, snow melt phenomena, and job particulars, the manufacturer cannot and does not express any opinions as to the suitability of any S-5! assembly for any specific application and assumes no liability with respect thereto. S-5! products are tested for ultimate holding strength on various profile types and materials. Visit **www.S-5.com** for more details. This document is an installation guide only and the photographs and drawings herein are for the purpose of illustrating installation, tools and techniques, not system designs. Information contained within is intended to apply to the document as a whole.

The S-5-U, S-5-S, S-5-E, S-5-B, and S-5-V clamps are made for standing seam profiles. For horizontal seam applications, the setscrew(s) must be accessible from the top for tightening. S-5-U clamps have two bolt holes to accommodate either vertical or horizontal seam applications; visit www.S-5.com for more details.

# **Tools Needed**

- Screw Gun\*
- T30 Torx Bit Tip (provided)
- Dial-Calibrated Torque Wrench
   (For accurate tension values, do NOT use a clicking torque wrench; inquire with S-5! for proper tool sourcing)

# To Install the S-5-U, S-5-S, S-5-E, S-5-B, and S-5-V


- 1. Partially thread the setscrews into the clamp by hand. (The S-5-U has four setscrew locations to make the clamp more versatile; however, only two setscrews are used per clamp. Both setscrews should always be loaded into the same side of the clamp.)
- 2. Determine how to position the clamp. When attaching to machine-folded seams (regardless of panel profile and geometry), S-5! clamps are designed to engage the seam as shown in Illustration A; with setscrew opposite seam fold. On many snaptogether type seams, the setscrews are on the open (or overlap) side of the seam. On some seams, this aspect of clamp orientation is not critical.
- 3. Tighten the setscrews using a screw gun\* and the included screw gun bit tip.

  Setscrews should be tensioned and re-tensioned as the seam material compresses, i.e. tighten the first setscrew, then the second; then repeat until each setscrew achieves the recommended torque. The setscrews will dimple the seam material but will not penetrate it. When relying on published load values, setscrew tension should be verified periodically using a calibrated torque wrench as indicated below to ensure the tool is consistently achieving the proper torque range. Note: See "Step 3 Note" at bottom of document on fitting S-5-U and S-5-V on certain vertical double-folds.
  - \* For time-saving tool recommendations, call S-5!

Specified Torque	Inch Pounds	Foot Pounds	Nm
22ga steel	160–180	13–15	18–20
All other metals and thinner gauges of steel	130–150	11–12.5	15–17


Once installed correctly, these clamps require no maintenance or reinspection for the life of the roof.


**4.** For critical attachment applications utilizing an M8-1.25 X 16 mm Hex Flange Bolt, tighten the included M8 bolt to 160 inch pounds (13 foot pounds).

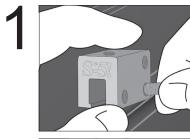








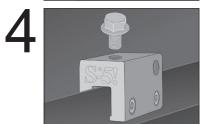

Above illustrations show S-5-U clamp on a vertical seam. Step 2 shows both vertical and horizontal applications.

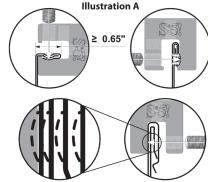

(Top) S-5-U clamp on both vertical and horizontal seams. (Bottom) S-5-S on a snap together seam with blow up illustrating deformation of seam as setscrew is tightened

For horizontal seams equal to or greater than .65" use the S-5-U in its horizontal orientation.

For horizontal seams equal to or less than .50" use the S-5-S mounted vertically.

These instructions are for use by those experienced in the trade. Always follow appropriate safety precautions and use appropriate tools.

# To Install the S-5-U Mini, S-5-S Mini, S-5-E Mini, S-5-B Mini, and S-5-V Mini

- 1. Partially thread the setscrew into the clamp by hand.
- 2. Determine how to position the clamp. When attaching to machine-folded seams (regardless of panel profile and geometry), S-5!® clamps are designed to engage the seam as shown in Illustration A on the front page; with setscrew opposite seam fold. On many snap-together type seams, the setscrew is on the open (or overlap) side of the seam. On some seams, this aspect of clamp orientation is not critical.
- 3. Tighten the setscrew using a screw gun\* and the included screw gun bit tip. The setscrew will dimple the seam material but will not penetrate it. When relying on published load values, setscrew tension should be verified periodically using a calibrated torque wrench as indicated below to ensure the tool is consistently achieving the proper torque range. Note: See "Step 3 Note" at bottom of document on fitting S-5-U Mini and S-5-V Mini on certain vertical double-folds.


\*For time-saving tool recommendations, call S-5!

Specified Torque	Inch Pounds	Foot Pounds	Nm
22ga steel	160–180	13–15	18–20
All other metals and thinner gauges of steel	130–150	11–12.5	15–17


Once installed correctly, these clamps require no maintenance or reinspection for the life of the roof.


**4.** For critical attachment applications utilizing an M8-1.25 X 16 mm Hex Flange Bolt (sold separately), tighten the bolt to 160 inch pounds (13 foot pounds).


**Step 3 Note:** When installing S-5-U, S-5-U, S-5-U Mini, or S-5-V Mini on a vertical double fold, you may need to lift clamp in a manner that allows the lip of the clamp to engage the bottom of the seam and the setscrew(s) to fully engage the fold while tightening the setscrew(s). See clamp lip engagement in figure below. This will assist in making the clamp sit more vertically on the seam.




**NOTE**: Any S-5! warranty and/or calculation may be void if hardware is used that was not furnished by S-5! directly or through one of their licensed distributors

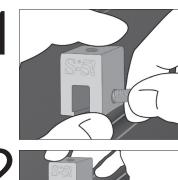



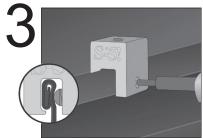

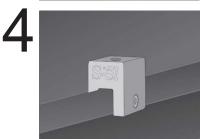

Above illustrations show S-5-E Mini clamp on a vertical seam. Step 2 shows S-5-E Mini on vertical applications and S-5-U Mini on horizontal applications.

#### S-5!® Warning! Please use this product responsibly!

Products are protected by multiple U.S. and foreign patents. Visit the website at www.S-5.com for complete information on patents and trademarks. For maximum holding strength, setscrews should be tensioned and re-tensioned as the seam material compresses, i.e. tighten the first setscrew, then the second; then repeat until each setscrew achieves the recommended torque. Clamp setscrew tension should be verified using a calibrated torque wrench between 160 and 180 inch pounds when used on 22ga steel, and between 130 and 150 inch pounds for all other metals and thinner gauges of steel. Consult the S-5! website at www.S-5.com for published data regarding holding strength.

Copyright 2020, Metal Roof Innovations, Ltd. S-5! products are patent protected.

#### **SECTION 07 72 53**

#### Blizzard Heavy Duty II Clamp to Seam Snow Guards

#### **PART 1 - GENERAL**

#### 1.1 SUMMARY

- A. Section Includes:
  - 1. Snow guards for metal roofs.
  - 2. Non-penetrating attachment system.

#### 1.2 RELATED SECTIONS

- A. Division 01: Administrative, procedural, and temporary work requirements apply to this section.
- B. Section 07 41 13 Metal Roof Panels
- C. Section 07 61 00 Sheet Metal Roofing
- D. Section 07 62 00 Sheet Metal Flashing and Trim
- E. Section 07 72 55 Roof Accessory Attachment System
- F. Section 13 34 19 Metal Building Systems

#### 1.3 REFERENCES

- A. Aluminum Association (AA) (www.aluminum.org) Aluminum Standards and Data, 2003 Edition.
- B. ASTM International (ASTM) (<u>www.astm.org</u>):
  - 1. A484/A484M-16 Standard Specifications for General Requirements for Stainless Steel Bars, Billets, and Forgings
  - 2. A554-16 Standard Specification for Welded Stainless Steel Mechanical Tubing
  - 3. A555/A555M-16 Standard Specification for General Requirements for Stainless Steel Wire and Wire Rods
  - 4. B85-03 Standard Specification for Aluminum-Alloy Die Castings
  - 5. B221-04a Standard Specification for Aluminum and Aluminum-Alloy Extruded Bars, Rods, Wire, Profiles, and Tubes
  - 6. F836M-02 (2015) Standard Specification for Style 1 Stainless Steel Metric Nuts (Metric).
  - 7. F880-12 Standard Specification for Stainless Steel Socket, Square Head, and Slotted Headless-Set Screws

#### 1.4 SUBMITTALS

#### A. Action Submittal:

1. Shop Drawings: Include roof plans showing locations of snow guards on roof and attachment details and spacing, signed and sealed by a professional engineer.

#### 2. Product Data:

- a. Product description.
- b. Construction details.
- c. Material descriptions.
- d. Individual component dimensions.
- e. Finishes.
- f. Installation instructions.
- 3. Samples:
  - a. Clamp samples.
  - b. 12-inch (305 mm) long cross member samples including all associated hardware.

#### B. Informational Submittals:

- 1. Include calculation of number and location of snow guards based on designed roof snow load, roof slope, roof type, components, spacings and finish.
- 2. Test results: Results of product tensile load testing, issued by a recognized independent testing laboratory, showing ultimate load-to-failure value of attachment.

#### C. Closeout Submittals:

1. Certification: Installer's certification that snow guard system was installed in accordance with manufacturer's instructions and approved Shop Drawings.

## 1.5 QUALITY ASSURANCE

- A. Manufacturer Qualifications: Manufacturer to specialize in production of Snow Guard Products of the type specified with a minimum of 20 years documented experience.
- B. Installer Qualifications: Installer to specialize in metal roof installation and installation of Snow Guard Products with a minimum of 5 years documented experience.
- C. Mockup:
  - 1. Size: Minimum [8] [ ] feet [mm] long.
  - 2. Show: Snow guard attachment, cross members, and accessories.
  - 3. Locate [where directed.] [ .]
  - 4. Approved mockup may remain as part of the Work.

#### 1.6 DELIVERY, STORGE AND HANDLING

- A. Deliver components to jobsite properly packaged to provide protection during transport, delivery and handling.
- B. Store products in manufacturer's original labeled and unopened packaging in a clean and dry location, protected from potential damage, until ready for application.

## **PART 2 - PRODUCTS**

#### 2.1 SYSTEM DESCRIPTION

- A. Attachment system to provide attachment to standing seam metal roofs:
  - 1. With only minor dimpling of panel seams.
  - 2. Without penetrations through roof seams or panels.
  - 3. Without use of sealers or adhesives.
  - 4. Without voiding roof warranty.

- B. Performance Requirements: Provide snow guards to withstand exposure to the weather and environmental elements, and resist design forces without failure due to defective manufacture.
  - 1. Loading: Design snow guard system to resist minimum in-service vector load of [\_\_] pounds per linear foot of eave.
  - 2. Factor of safety: Utilize a factor of safety ≥ [2] [\_\_\_\_] to determine allowable loads from ultimate tested clamp tensile load values.
  - 3. Source Limitation: Provide snow guard system as designed and tested by the manufacturer as a complete system. Install components by the same manufacturer.

#### 2.2 MANUFACTURER

Acceptable Manufacturer: Rocky Mountain Snow Guards, Inc., 4231 S. Natches Ct., Unit C, Englewood, CO 80110; Tel: 720-379-7756; Fax: 720-387-8361; Email: <a href="mailto:info@rockymountainsnowguards.com">info@rockymountainsnowguards.com</a>. Web: <a href="https://www.rockymountainsnowguards.com">www.rockymountainsnowguards.com</a>.

#### 2.3 FENCE-TYPE SNOW RETENTION SYSTEMS FOR STANDING SEAM METAL ROOFS

- A. Basis of Design: Blizzard Heavy Duty II, manufactured by Rocky Mountain Snow Guards, Inc.
- B. Components:
  - 1. Clamps
    - a. Manufactured from 6061-T6 aluminum extrusions conforming to ASTM B221 or aluminum castings conforming to ASTM B85 and to AA Aluminum Standards and Data.
      - 1) Model: No. [S-5-U] [S-5-S] [S-5-T] [S-5-Z] [S-5-Q] [S-5-H] [S-5-H90] [S-5-V]
    - b. Set screws: 300 Series stainless steel, 18-8 alloy, 3/8 inch (9.525 mm) diameter, with round nose point.
  - 2. Brackets:
    - a. Manufactured from 5000 Series alloy and temper aluminum conforming to ASTM B221 and AA Aluminum Standards and Data.
  - 3. Aluminum Tubing (Cross Members):
    - a. Manufactured 6005a-T61 Series alloy and temper aluminum extrusions conforming to ASTM B221 and AA Aluminum Standards and Data.
      - 1) 1" O/D Tubing with .125" thickness walls.
  - 5. End Collar:
    - a. Manufactured from 6005a-T61 Series alloy and temper aluminum extrusions conforming to ASTM b221 and AA Aluminum Standards and data, with ½-20 x 3/8 inch (9.525 mm) stainless steel set screw.
      - 1) End Collar
  - 6. Ice Flags:
    - a. Aluminum.
      - 1) 3.5" wide.
  - 7. End Caps:
    - a. Stainless Steel.

#### **PART 3- EXECUTION**

#### 3.1 EXAMINATION

- A. Prior to beginning installation, verify that:
  - 1. Panel seaming is complete.
  - 2. Panel attachment is sufficient to withstand loads applied by snow guard system.
  - 3. Installation will not impede roof drainage.

#### 3.2 PREPARATION

A. Clean areas to receive attachments; remove loose and foreign matter that could interfere with installation or performance.

#### 3.3 INSTALLATION

- A. Install system in accordance with manufacturer's instructions and approved Shop Drawings.
- B. Blizzard Heavy Duty II Snow Retention System:
  - 1. Pre-load 1 set screws into each clamp.
  - 2. Align clamp placement using a string line or laser guide light. 1st row is usually placed 12" from eave edge. Additional rows may be necessary. Placement of those rows must follow Rocky Mountain Snow Guards Snow Retention Plan for each project.
  - 3. Clamps may be a maximum of 48" apart.
  - 4. Reference installation instructions for the specific clamp used to assure they are oriented correctly. Torque ratings and specific clamp installation instructions are available at www.s-5.com.
  - 5. Tighten clamp set screws to manufacturers recommended torque. Test set screw torque using calibrated torque wrench.
  - 6. Insert Tubing through brackets. Insert swaged tubing end into non-finished end of the adjacent tube.
  - 7. Slide End Collars over tubes making sure that the Collars are on the INSIDE of the last Blizzard Heavy Duty II bracket on each run. This is necessary to hold the swaged tubing ends together within a run.
  - 8. Cut extended end of tube at end of run. Do not cantilever tubes more than 4 inches (101.6 mm) beyond last bracket at ends.
  - 9. Apply end cap to each tube.
  - 10. Install one Ice Flag per panel for panels less than 18" wide. Install 2 Ice Flags for panels wider than 18".
    - a. Secure each Ice Flag by tightening the upslope nut until the Ice Flag will not slide side to side on the tube.

#### END OF SECTION



ROCKY MOUNTAIN SNOW GUARDS 4231 S. NATCHES COURT, UNIT C ENGLEWOOD, CO 80110 PHONE: (877) 414-7606 FAX: (720) 387-8361

www.rockymountainsnowguards.com

# Rocky Mountain Snow Guards Snow Retention System Maintenance Guide

Systems designed by Rocky Mountain Snow Guards, installed properly should last the life of the roof. Rocky Mountain does not recommend adhesive tape or sealant attachment for any snow fence or snow guard system. Rocky Mountain snow retention systems installed on commercial buildings, above high traffic areas or in areas with high snow loads should be inspected by a qualified roofing or snow retention professional on an annual basis to ensure the system will continue to perform as designed.

# **Bolt Down Snow Fence Systems:**

- 1. Inspect brackets, snow fence components and fasteners for evidence of damage.
- 2. Replace damaged parts prior to the next snow season.

## Clamp to Seam Snow Fence and Snow Bar Systems:

- 1. Inspect brackets, snow fence and snow bar components for evidence of damage.
- 2. Replace damaged parts prior to the next snow season.
- 3. Check torque on set screws with an appropriate torque wrench.
- 4. Torque set screws to recommended torque. This is especially important after the 1st snow season.

#### **Snow Guards:**

- 1. Inspect snow guards for evidence of damage.
- 2. Inspect exposed fasteners.
- 3. Replace damaged parts prior to the next snow season.